



RMPU User Manual

Skyjacks Wheelchair &

Commercial Lifting Systems (Pty) Ltd

Contact Details

Paul Hansen +27 (0) 82 335 9442

Neil van Rensburg +27 (0) 60 989 5842

Clinton Demaine +27 (0) 71 587 3145

www.swclifts.com

Prior to Lift Operation Always Ensure The Following:

- * The vehicle is parked on a level surface for the safety of personnel and load.
- * There is enough space behind the vehicle to open the platform & to load & unload the lift.
- * Consult the Daily Check Sheet to make sure the lift is in good working order.

NOTE

Never move the vehicle without the lift platform secured in the vertical position locked in its cradle.

Negligent use of this lift can cause serious bodily harm or death.

STEP 1

Turn isolator switch on Power Pack to the On Position.



STEP 2

Stand at a 45 degree angle on the left hand side where the control switch is located., holding the control switch in your left hand.



STEP 3

To release the platform from its wedge, push the down button.



STEP 4

With your right hand pull the platform back & down, keeping your hand on the platform at all times, gently lower the platform to its horizontal position.



STEP 5

Push the down button to make the platform descend, always making sure there is nothing under the platform.



STEP 6

When the platform reaches the ground, the stop type ramp must be opened. This device serves a dual purpose of ensuring the load does not roll off the lift platform during the ascent and descent, and allowing for smooth loading and unloading of the platform.



NOTE

Once the platform is on the ground, you can now proceed with loading the platform, always ensuring that the maximum lifting capacity of the lift is not exceeded. Exceeding the maximum load capacity when loading and offloading, may cause irreparable structural damage to the lift and is a safety hazard.

STEP 7

Once the load is securely centred on the platform, the operator can push the up button on the 2 button switch to make the platform ascend. Ensure no personal move underneath or behind the platform at any time during the lifts operation, laden or un laden.

STEP 8

Press and hold the up button until the lift platform reaches the same height as the vehicles loading deck. Once the platform reaches this position release the button.

NOTE

The rear swing doors must either be fully closed with latches in the locked position or fully open latched against the body during lift operation. Failure to do this will cause damage to the doors and to the lift.



STEP 9

The load can now be pushed onto the vehicle loading deck. Always ensure the load is moved as far forward as possible on the vehicles loading deck to ensure the vehicles weight and balance criteria are met. Refer to the vehicles user manual for loading instructions.

STEP 10

Once the load has been correctly positioned onto the vehicles load deck, the lift platform can be closed. To close the platform, lift the flap for the platform up while pushing it forward. Ensure the platform is closed completely to a vertical position.



STEP 11

To lock the platform into its cradle, push and hold the platform in the closed position. The platform, in its vertical position will ascend it has stopped locking the platform in place. Neglecting this step, may cause the platform to open during vehicle movement which may cause damage to the lift and is a safety hazard.



STEP 12

Turn the cut off switch on the Power Pack to the off position Push the up button of the 2 button switch confirming the power is off.

