



SCL500

User Manual

**Skyjacks Wheelchair &
Commercial Lifts (Pty) Ltd**

Contact Details

Head Office +27 (0) 11 892 0347

Paul Hansen +27 (0) 82 335 9442

Neil van Rensburg +27 (0) 83 725 1613

Michelle Panaino +27 (0) 82 872 2211

www.swclifts.com

Prior to Lift Operation Always Ensure The Following:

- * The vehicle is parked on a level surface for the safety of personal.
- * There is enough space behind or to the side of the vehicle to open the platform & to load & unload the lift.
- * Consult the Daily Check Sheet to make sure the lift is in good working order.

NOTE

Never move the vehicle without the lift platform secured in the vertical position.

Negligent use of this lift can cause serious bodily harm or death.

STEP 1

Stand at a 45 degree angle on the left hand side where the control switch is located., holding the control switch in your left hand.



STEP 2

After making sure that no personal are directly behind the lift platform, press the down button on the control switch. This will make the lift platform move from the vertical position to a horizontal position.



STEP 3

Continue holding the down button in order to make the lift platform reach the ground.



STEP 4

Once the lift platform is reaches the ground, the automatic roll stop flap will activate. This will allow the operator to load the platform.



NOTE

Never exceed the safe Working load of 500 kgs.

Overloading the lift can cause irreparable damage to the lift and is a safety hazard.

STEP 5

Place the load as far forward on the lift platform as you can, then press and hold the up button to elevate the lift.



STEP 6

Once the lift platform reaches the floor level of the vehicle, release the up button. The load can now be positioned inside the vehicle taking note of the vehicles loading safety requirements.



STEP 7

Repeat steps 2 to 4 for loading additional pallets of goods, never exceeding the Safe Working Load of 500 kgs.

STEP 8

When offloading is required, lower the lift platform from the vertical position to the horizontal position. The load can then be moved onto the platform always making sure the load is as far forward on the platform as possible



STEP 9

Lower the lift platform from the vehicle floor height down to the ground by holding the down button on the control switch. Always make sure that no one is moving around the lift during operation of the lift.



NOTE

Never exceed the safe Working load of 350 kgs.

Overloading the lift can cause irreparable damage to the lift and is a safety hazard.

STEP 10

Once the lift platform reaches the ground, the automatic roll stop will activate, allowing the load to be move off the lift platform.